



ADJUSTABLE BAYONET SPRING(STYLE)

HOW TO CONSTRUCT A PART NUMBER

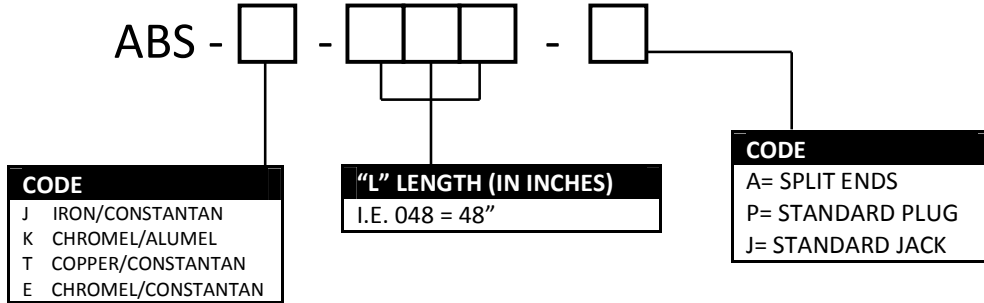


EXAMPLE: ABS-J-048-A = TYPE J, 48", 2-1/2" SPLIT LEADS
FOR ANYTHING SPECIAL ADD X AFTER COLD END TERMINATION CODE

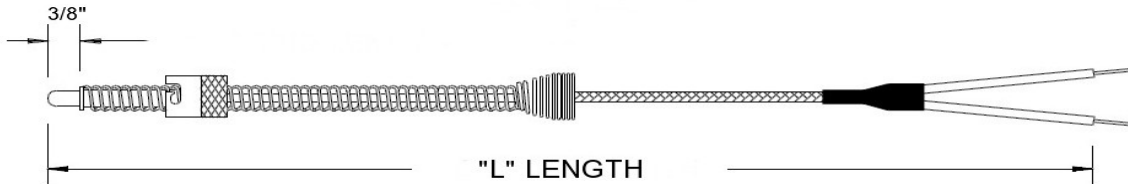


ADJUSTABLE BAYONET FLEX ARMOR (STYLE)

HOW TO CONSTRUCT A PART NUMBER

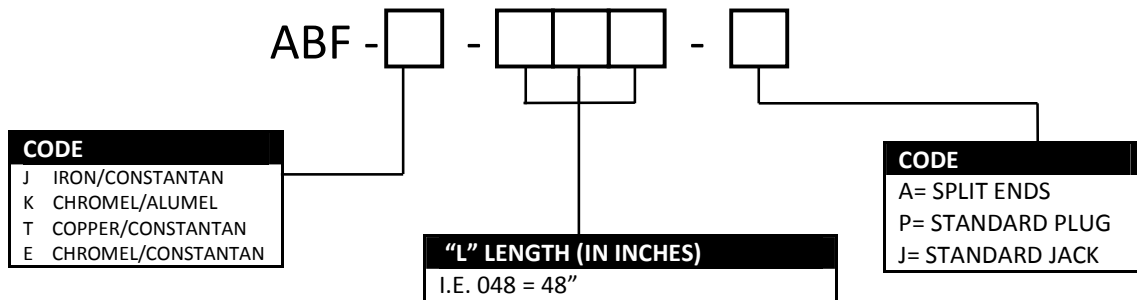

EXAMPLE: ABF-K-096-P = TYPE K, 96", STANDARD PLUG
FOR ANYTHING SPECIAL ADD X AFTER COLD END TERMINATION CODE

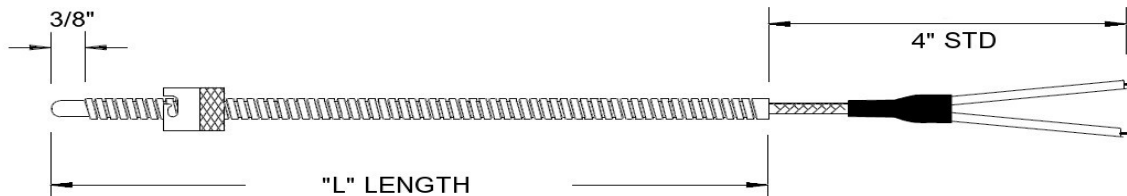

PHONE (951) 215-7070 FAX (951) 279-1641 WEBSITE: WWW.TCI-INC.COM